


ELEGOO

● Mercury Plus 2.0 Wash & Cure Machine

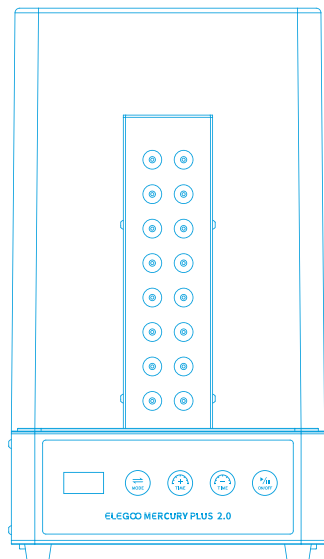

User Manual

Upon receiving the product, please confirm that the device is intact and all accessories are included. If you encounter any issues during installation, operation, or maintenance, please contact the ELEGOO after-sales team for professional support through the official channels below:

1. Visit our dedicated support page: <https://www.elegoo.com/pages/contact-support>. (We recommend copying the link and opening it in your browser.)
2. Scan the QR code below for personalized, one-on-one assistance.



(Note: To ensure optimal performance, each ELEGOO product undergoes rigorous printing tests before shipping. You may notice minor surface scratches upon delivery; this is normal and does not affect functionality. Please use your product with confidence.)

Notice

- Please always keep in mind the precautions when using the ELEGOO Mercury Plus 2.0 Wash & Cure Machine. Failure to comply with these precautions may cause the damages to the machine or even cause individual injury.
- Please contact our customer service first to arrange replacement if any parts are found damaged or missing after receiving the products.
- It is forbidden to put the model directly into the cleaning bucket for cleaning, please put the model in the cleaning basket for cleaning, and according to the size of the model you can choose to clean it with or without the platform.
- Please follow the safety regulations to use and store the washing liquid (which could be ethyl alcohol or isopropanol) properly. The washing liquid should not exceed the maximum height of the cleaning bucket, otherwise, the washing liquid may overflow and cause damage to the machine. Please seal the cleaning bucket with the lid when using and after using.
- Please wash and dry the model first before curing, otherwise, the model would be covered with some white residues, sticky or cracked.
- Do not take away the lid from the machine when curing mode is on as to prevent potential hazards from the UV lights.
- After long-hour use in the curing mode, it is normal that the temperature of the machine body and the cover will rise.
- Please adjust the curing time appropriately if the model turns yellow after curing. Over curing will lead to the model yellowing.
- ELEGOO Mercury Plus 2.0 Wash & Cure Machine is designed to be used within ambient temperature ranging from 0°C to 40°C, and humidity ranging from 20% to 50%.
- Do not disassemble the ELEGOO Mercury Plus 2.0 Wash & Cure Machine without consulting. Please contact ELEGOO customer service: 3dp@elegoo.com if you have any problems.

Contents

Packing List 01

Machine Introduction 02

Machine Tech Specs 03


Product Overview 04

Washing Mode Operation Steps 05


Curing Mode Operation Steps 08

Routine Maintenance 09


FAQ 11

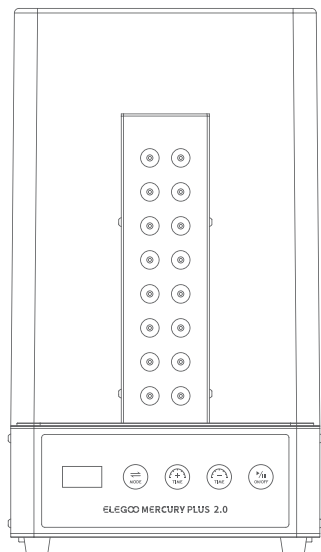

**Mercury Plus 2.0
Wash & Cure Machine**

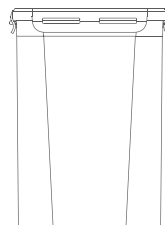

Cleaning Bucket

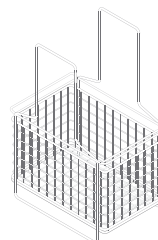


Cleaning Basket



Curing Turntable





Tool kit

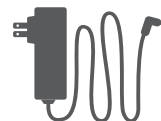

Power Adapter



User Manual

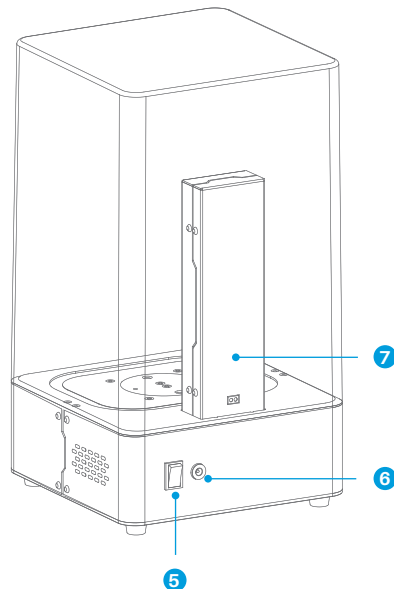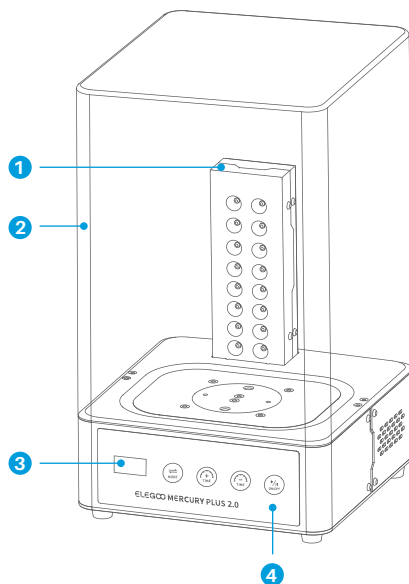

1
pillar

2
Anti-UV Lid

3
Display Screen

4
Control Panel

5
power switch

6
power Input

7
Lid Cover Sensor

Machine Parameter

- Control Method: Touch button
- Power Requirements: 100-240V 50/60Hz 12V 4A

Machine Specification

- Machine Size: 200mm*200mm*352mm
- Net Weight: 3.8KG

Washing and Curing Specification


- Power: 48W
- UV Light: 405nm(8+8)
- Maximum Washing Volume: 124mm*90mm*110mm (With build platform)
131mm*90mm*220mm (Without build platform)
- Maximum Curing Size: Ø140*165mm
- Time Setting: 0-30 minutes
- Curing Time Setting: For models with a diameter smaller than 30mm, the curing time is recommended to be 2 minutes. If the structure of the model is complex, it is recommended to increase the curing time properly.

MODE

Switch the Wash/Cure mode.

TIME+

Click once will increase 30s each time. Long press the button to continuously get the time increase and the maximum time is 30 minutes.

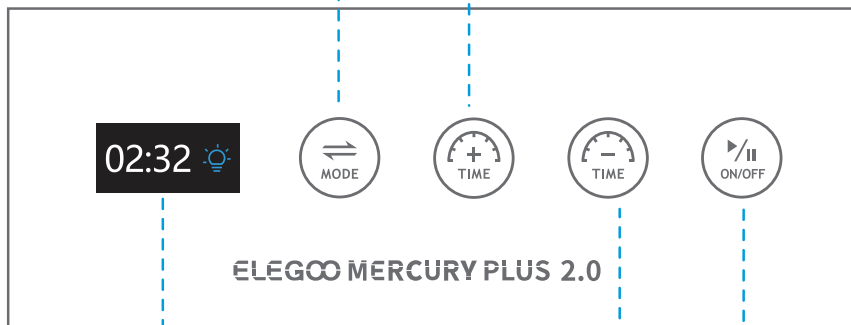

Time and mode display

The left side shows the timing time;
On the right is the current mode icon.

ON/OFF

Turn on or turn off
the machine.

TIME-

Click once will decrease 30s each time. Long press the button to continuously decrease the time until it is 0 seconds.


ELEGOO Mercury Plus 2.0 Wash & Cure Machine has two working modes, wash mode and cure mode. Please plug in the power and turn on the machine before use.

4.1 Wash Mode

4.1.1 Switch the machine to "Wash Mode" by touching the "MODE" on the panel, at this time the display mode icon shows: 


4.1.2 Please submerge the model in a suitable way in the washing liquid of the cleaning bucket.

(It is forbidden to put the model directly into the cleaning bucket for cleaning, otherwise, the model and the parts of the cleaning bucket will be damaged.) (See Picture 1)

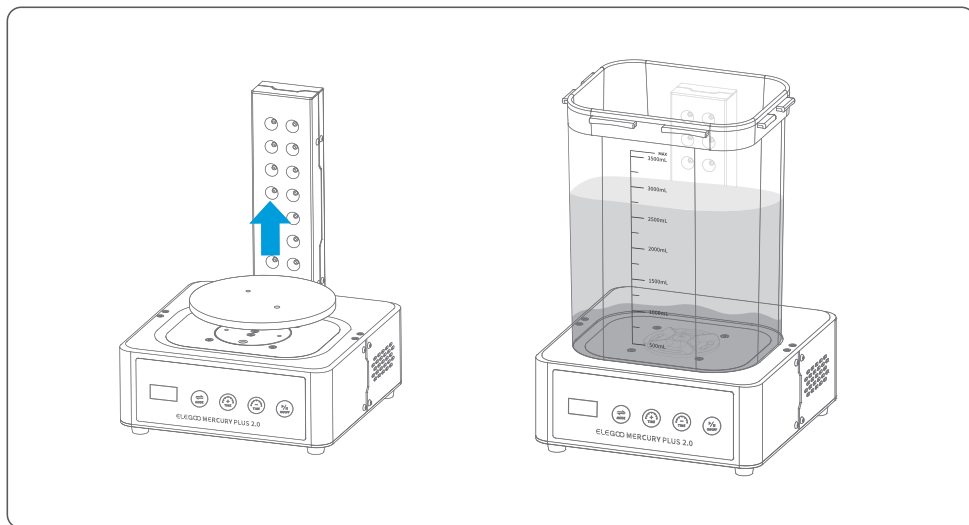

(Picture 1)


a. When the model is within the size of 124mm*90mm*110mm, you can wash the model with build platform, remove the lid of the cleaning bucket, put the cleaning basket into the cleaning bucket, and then place the model with platform upon the bracket, (Be careful not to bump the model during placement.) and then pour the appropriate amount of washing liquid (The washing liquid should cover the platform and not beyond the 3000ml scale line,) into the cleaning bucket and finally sea the lid. (See [Picture 2](#))

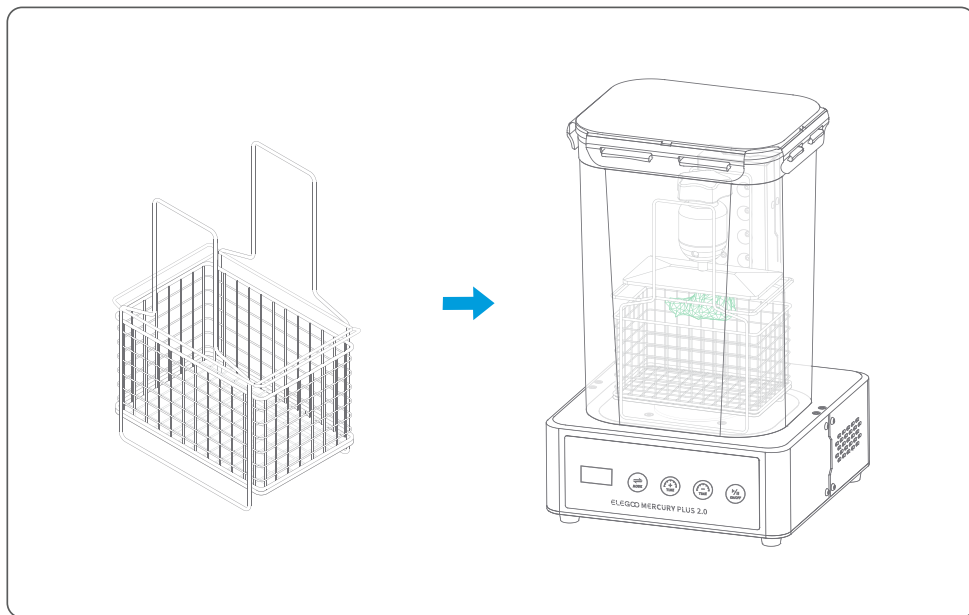

(Picture 2)

b. When the model is out of the size of 124mm*90mm*110mm, then you should clean the model without build platform. Please remove the lid of the cleaning bucket first, put the cleaning basket into the cleaning bucket and then pour the appropriate amount of washing liquid into the cleaning bucket and finally seal the lid.

(See Picture 3)

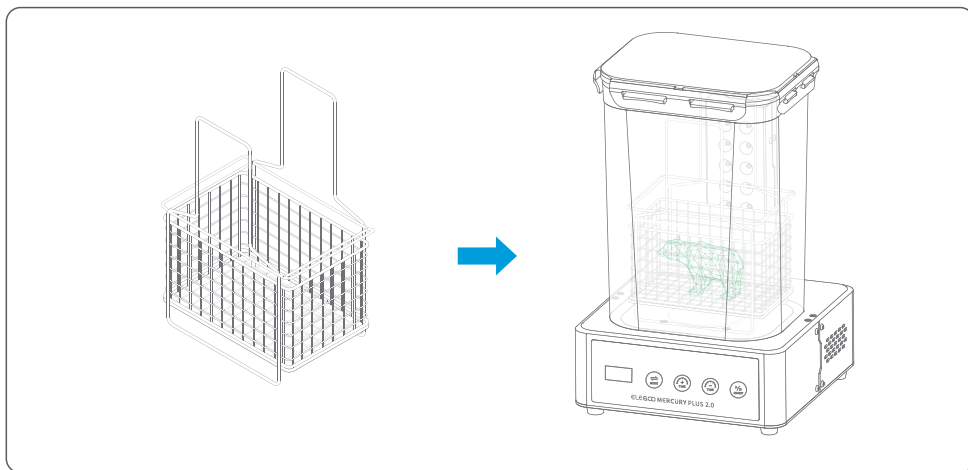

(Picture 3)


4.1.3 No need to cover with anti-UV lid. Touch "TIME+" or "TIME-" to set the washing time. After that, touch "ON/OFF" to start cleaning the model.

4.1.4 The machine will beep when the cleaning is done, Please remove the model for air drying. After cleaning, remove the cleaning bucket and seal it with lid (washing liquid can be used multiple times). If washing liquid spills onto the machine, please clean it up quickly to avoid a short circuit caused by washing liquid flowing into the machine.

4.2 Cure Mode

4.2.1 Switch the machine to Cure Mode" by touching the "MODE" on the panel, at this time the display mode icon shows: 

4.2.2 Place the curing turntable firmly against the turntable positioning hole in the center of the machine platform (please remove the cleaning bucket beforehand). (See Picture 4)

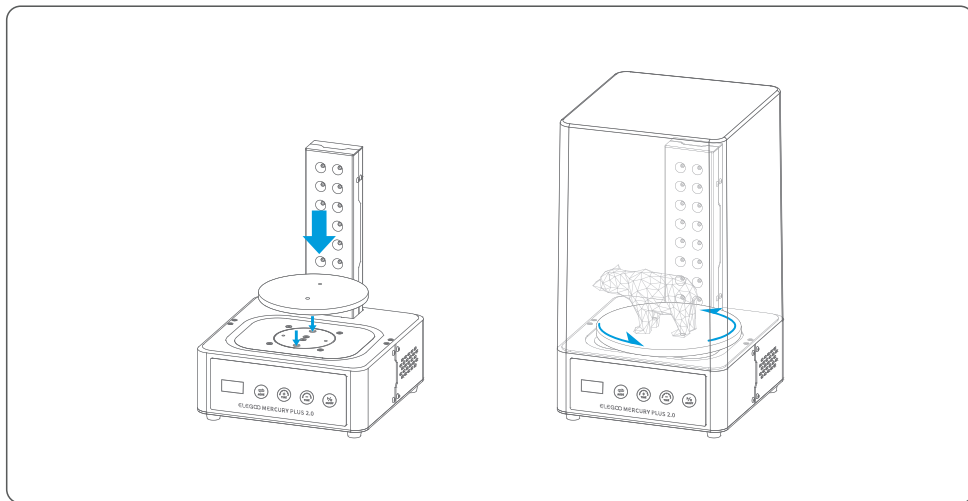

(Picture 4)


4.2.3 Place the model on the center of the curing turntable.

4.2.4 Then cover the anti-UV lid. Touch "TIME+" or " TIME-" to set the curing time. After that,touch "ON/OFF" to start curing the model. It is normal that there is a slight jitter due to the slow speed of the turntable.

4.2.5 The machine will beep when the curing is done.

5.1 Recycling of Washing Liquid


When the washing liquid in the bucket is reused for more than 30 times, we need to filter and clean the waste. First, leave the washing liquid to stand for about 10 hours, and then after the waste has settled to the bottom of the cleaning bucket, pour the washing liquid from the top of the bucket into another container, then clean the waste from the bottom of the bucket (the waste would be converted to ordinary solid waste in sunlight), if necessary, the bucket rotor can be removed for cleaning. (See Picture 5)

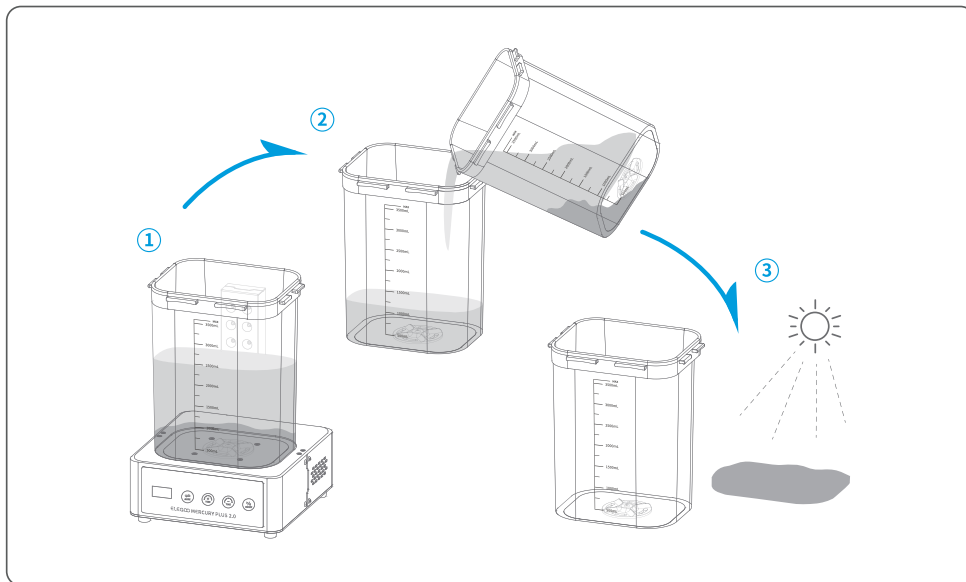

(Picture 5)

5.2 Cleaning the Rotor of the Cleaning Bucket

After a period of use, the bottom rotor of the cleaning bucket may rotate abnormally due to the precipitation, at which point the rotor can be removed for cleaning. (See Picture 6)

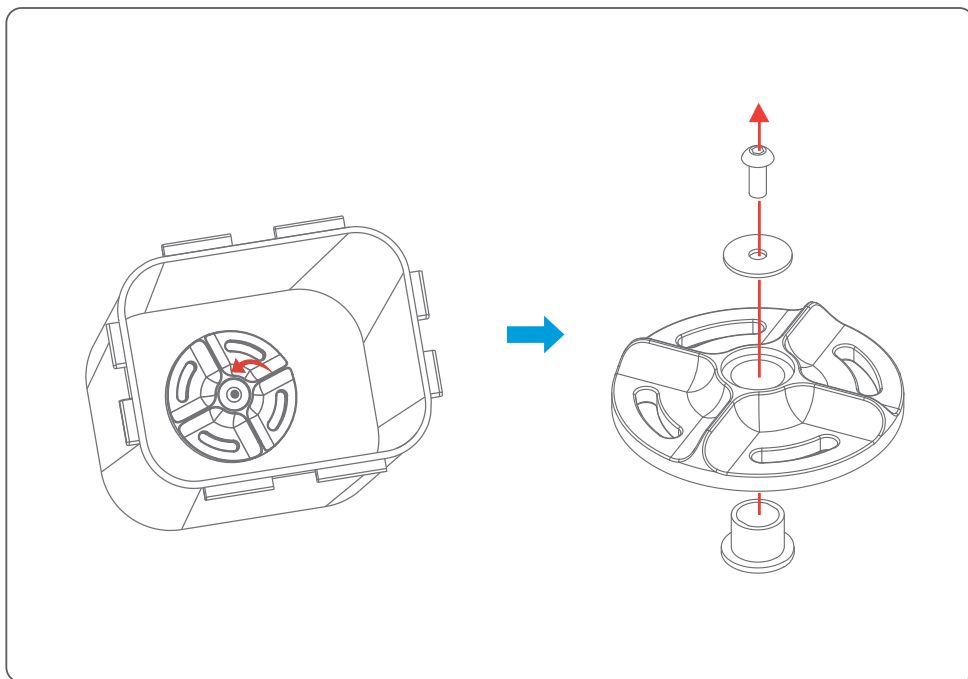

(Picture 6)

1. The machine does not work

- The anti-UV lid is not covered. Try again after cover the lid.
- Poor power contact, Pull out the power cord and plug it in again.

2. The model turn white after washing and curing

- Insufficient alcohol concentration. Please use a concentration of alcohol greater than 95% for cleaning.
- Curing is performed immediately after the model is washed. It needs to wait for the model air dry before putting it into the machine for curing.

3. The bottom rotor of the cleaning bucket does not rotate in the washing mode.

- The rotor might be caught by foreign matters. Please try again after taking the cleaning bucket down, pouring out the washing liquid, and removing the foreign matters.
- There is too much precipitation in the washing liquid, please taking the cleaning bucket down first, and try again after cleaning the precipitation of the washing liquid or changing the washing liquid.

4. The cleaning bucket has abnormal sound during operation.

- The screw of the rotor is loose during the washing process. Please fix the screw to the rotor with tool.

- Telephone--0755-21005141
- Website--www.elegoo.com
- Address--101, No.30 Dahe Industrial Park,
Guancheng Community, Guanhu Street,
Longhua District, Shenzhen, China

ELEGOO